

KEMIE



USE & MAINTENANCE

NATURAL STONE



USAGE PROPERTIES

Granite & quartzite



Marble





USAGE INSTRUCTIONS

- Do not place a hot pan directly on the worktop and avoid (prolonged) contact heat.
- Do not sit or stand on the worktop.
- Do not drop hard, pointed objects on the worktop or edge; this may cause damage. Marble in particular is a very scratch-sensitive material.
- Avoid contact with chemicals or agents with a high pH value. In any case, agents that should not come into contact with the worktop are: sink removers, oven cleaners, dishwasher detergents, chlorine, bleach and solvents. These agents can have an adverse effect on the minerals present in natural stone.
- Do not allow the under-counter dishwasher to evaporate with the door open.
- Remove stains, dirt and grease directly from the worktop with advised agents.
- The hardness of the worktop is many times greater than that of a knife, which can make knives blunt. Therefore, use a cutting board at all times.
- Note that ceramic knives are extremely hard and can scratch the worktop.



SINKS

Stainless steel sinks:

- Stainless steel is an extremely durable material. However, it is not scratch-resistant, so scratches cannot be avoided.
- Avoid contact with acidic chemicals, such as hydrochloric acid, silver polish, tile and cement cleaners and chlorine. These can damage brushed stainless steel beyond repair.
- In some cases, small brown dots may be visible on the stainless steel. This is caused by deposits of rusted iron particles in the tap water. These dots sit on the stainless steel and can be removed with common cleaning agents such as Staalfix or with a scouring sponge.

Plastic sinks:

- Do not use steel wool to clean a plastic sink. This will cause irreparable damage.
- Do not use citric acid or chlorine-based maintenance products, and avoid abrasive cleaning products such as CIF.
- It is not recommended to keep volatile maintenance agents based on chlorine or ammonia in the sink cabinet.



WARRANTY AT KEMIE

At Kemie, every product is manufactured with care and attention to detail and thoroughly checked for quality. We stand behind our products and therefore offer a standard 5-year warranty on hidden defects in construction or material, from the first date of delivery.

Not covered by the warranty:

- Material-specific features mentioned in the sales documentation, such as small pits and/or small deviating colour concentrations.
- Defects resulting from normal wear and tear, neglect, incorrect or injudicious use or handling, or application not corresponding to common household use.
- Defects resulting from incorrect or careless assembly.
- Usage damage caused by failure to follow the instructions for use.



MAINTENANCE INSTRUCTIONS

Quick cleaning



Wipe the top with a warm, damp cloth.



Wipe the top with a microfibre cloth.



Dry the top for a streak-free result.

Thorough cleaning



Apply the Clean & Shine cleaner thinly and evenly.



Allow the cleaner to take effect for 10 minutes.



Wipe the top with a microfibre cloth.



Dry the top for a streak-free result.